
取扱説明書

ワイヤレススピーカー K50

- この取扱説明書では、製品の取り扱い方のほか事故を防ぐための重要な注意事項を記載しています。
- 製品を安全にお使いいただくため、お読みになられた後も引き続き大切に保管してください。

KING LUCKY

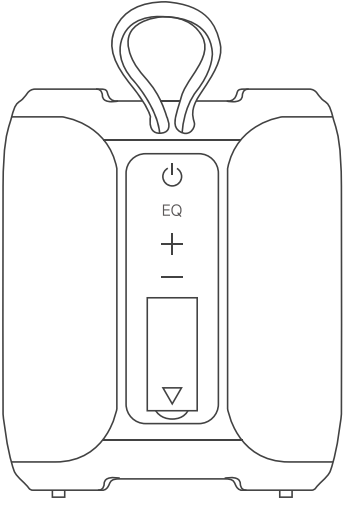


操作方法

x1　クリック
X2　ダブルクリック
>2S　2秒間長押し

X1 モード切替：
Bluetooth/AUX/TFカード再生の切替

X2 TWS接続を確立するとTWS接続を解除

>3S 電源オン/オフ

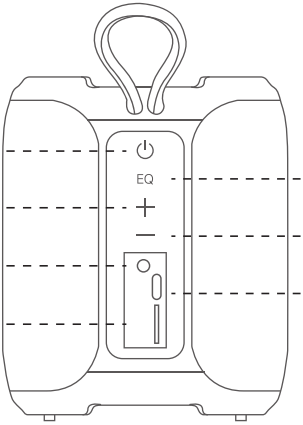

X1 一時停止/音楽再生
X2 EQモード切替
>3S BLUETOOTH接続を解除する
X1 電話に出る/終了

X1 音量アップ
>2S 次の曲

X1 音量ダウン
>2S 上の曲

3.5mm AUXインターフェース

USB Type-C 端子

TFカードインターフェース

製品の仕様

製品型番:	K50
無線方式:	V5.3
防水規格:	IPX7
最大通信距離:	≤10m
充電入力:	DC 5V/2A
充電時間:	4-5H
外形寸法:	130*125*106mm
S/N比:	88dB ± 3dB

Bluetooth機器とのペアリング

1.電源ボタン「⏻」を3秒間長押しして、ワイヤレスポータブルスピーカーK50を起動します。
2.Bluetooth機器の電源が入っており、Bluetooth機能がオンになっていることを確認します。
3.Bluetooth機器のBluetooth設定ページで「K50」を選択します。
4.Bluetooth接続を解除したい場合は、EQボタンを3秒間長押しします。
5.以前に接続したことのあるBluetooth機器がペアリング状態にある場合、K50は次回の起動時に自動的にその機器に接続します。

AUX経由での接続

1.3.5mmオーディオケーブルを使用して、スピーカーとスマートフォンまたはパソコンを接続します。

2.音楽再生中に「EQ」ボタンを1回押すと、K50の再生が停止します。

TWS機能の使用方法

ワイヤレスステレオペアリング機能で、2台のK50スピーカーをペアリングすれば、どこでも大音量ステレオサウンドをお楽しみいただけます。

1.2台のK50スピーカーを用意します。2台のスピーカーの「⏻」ボタンを長押しし、「Bluetooth mode」という音声案内が聞こえるまで押し続けます。

2.2台のスピーカーがどのBluetooth機器にも接続されていないことを確認します。スピーカーが以前接続していたBluetooth機器に自動的に接続されると、TWS接続が失敗する可能性があります。その場合は、以前接続していたBluetooth機器のBluetooth接続を解除してください。

3.どちらか一方のK50の「⏻」ボタンをダブルクリックすると、ペアリングのための音声案内が聞こえます。ペアリングには約2～4秒かかります。音声案内が聞こえたら、TWS接続が成功したことを示します。

4.Bluetooth機器のBluetooth機能をオンにします。Bluetooth機器のBluetooth設定画面で「K50」を選択して接続します。

5.初回のTWS接続が完了すると、次回以降は2台のK50スピーカーの電源を入れると自動的にTWS接続が行われます。

6.2回目以降に自動的にTWS接続が行われない場合、2台のK50スピーカーの間に障害物がないことを確認し、距離が3m以内であることを確認してください。それでもTWS接続が行われない場合は、再度1～4の手順を実行してください。

7.TWS接続を解除したい場合は、どちらか一方のK50の「⏻」ボタンを2秒間ダブルクリックしてください。

IPX7防水

製品本体は最長30分間であれば水深1mまで沈めても操作可能なIPX7の防水設計で、キッチンやお風呂場、海等でも気軽にお気に入りの音楽を堪能できます。

⚠ ご注意：

1.水のかかるおそれのある場所では充電しないでください。同梱品は防水·防じん仕様ではありません。火災や感電の危険を減らすために付属のUSB Type-Cケーブルを使用している間は、本体を水や水滴にさらさないでください。

2.表面が汚れたときは、すみやかに真水(水道水など)で洗い、汚れを落としてください。付着したまま放置すると、パッシブラジエーター部分の変色や劣化、スピーカーの故障の原因となります。

3.表面がぬれている場合、すみやかに乾いた柔らかい布で水分を拭き取ってください。さらに風通しの良い場所で乾燥させてください。

充電に関するご注意

1.周囲の温度が8℃～39℃の環境で充電してください。

2.初めてスピーカーを使用する際は、電源を入れる前に必ず2時間以上充電してください。

3.USB Type-Cケーブルをスピーカーの DC IN 5V端子に接続し、もう一方を市販のUSB ACアダプターに接続してください。その後、USB ACアダプターを電源コンセントに差し込んでください。

4.使用状況によっては充電時間が長くなることがありますので、充電時にはスピーカーの電源を切ることをおすすめします。

5.長期間使用しない場合、内蔵充電池の劣化を防ぐため、3ヶ月に1度充電してください。

使用上のご注意

1.次のような場所には置かないでください：直射日光の当たる場所、照明器具の下、暖房器具の近くやサウナなど、温度の高い所、を閉め切った自動車内（特に夏季）。

2.平らな場所に設置してください。傾いた場所に設置すると、スピーカー自体の振動により転倒・落下し、けがや故障・性能劣化の原因になることがあります。

3.スピーカーは精密に調整してあります。分解や改造などはしないでください。

4.ケーブルにひび割れなど、何らかの物理的損傷がある状態で本品を使用しないでください。
5.充電中は、スピーカーが温かくなることがありますが、故障ではありません。
6.内蔵充電池の持続時間は温度や使用環境などにより異なります。たとえば、大音量でスピーカーを使用すると、持続時間は短くなります。
7.スピーカーと接続するBluetooth機器や通信環境、周囲の状況によっては、雑音が入ったり、音が途切れたりすることがあります。

困ったときは

Q:Bluetoothペアリング（機器登録）できない

A:1.スピーカーが前回接続していた別のBluetooth機器と自動的に接続された場合、Bluetooth接続に失敗することがあります。その場合は前回接続していたBluetooth機器のBluetooth接続を解除してください。
2.ペアリングしたいBluetooth機器にスピーカーが表示されない場合、Bluetooth機器のBluetooth機能を一度オフにしてから再度オンにすると、症状が改善されることがあります。

音が出ない、音が小さい、音が割れる、ノイズが出る、音が途切れる場合


1.接続先の機器とスピーカーの電源が入っていることを確認してください。
2.接続先の機器とスピーカーの音量を確認してください。
3.スピーカーとBluetooth機器がBluetooth接続されていることを確認してください。
4.Bluetooth機器とスピーカーをもう一度ペアリング（機器登録）してください。
5.スピーカーを電子レンジや無線LANなどから離してください。
6.スピーカーにBluetooth機器を近づけてください。スピーカーとBluetooth機器の間に障害物がある場合は、移動させてください。
7.ラジオやチューナーを内蔵した機器とBluetooth接続すると、ラジオなどの音声に雑音が入ることがあります。スピーカーとこれらの機器をBluetooth接続でお使いいただくことはできません。

Instruction Manual

Wireless Speaker K50

- This user manual contains important instructions on how to use the product and precautions to prevent accidents.
- To ensure safe use of the product, please keep this manual for future reference after reading.

KING LUCKY

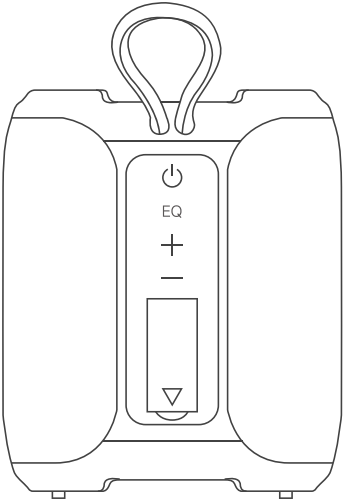

Operation Instructions

x1: Click
X2: Double Click
>2S: Long Press for 2 Seconds

X1: Mode Switching::
Switch between Bluetooth/AUX/TF Card playback


X2: TWS Connection:
Establish/Disconnect TWS Connection

>3S Power On/Off

X1: Volume Up
>2S: Next Track

3.5mm AUX Interface

TF Card Interface

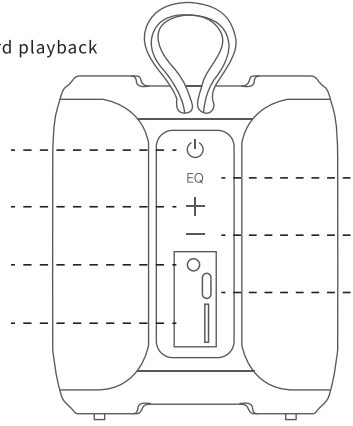

X1: Pause/Play Music
X2: Switch EQ Modes
>3S: Disconnect Bluetooth
X1: Answer/End Call

X1: Volume Down
>2S: Previous Track

USB Type-C Port

Product Specifications

Model Number:	K50
Wireless Version:	V5.3
Waterproof Rating:	IPX7
Maximum Communication Distance:	≤10m
Charging Input:	DC 5V/2A
Charging Time:	4-5H
Dimensions:	130*125*106mm
S/N Ratio:	88dB ± 3dB

Pairing with Bluetooth Devices

1.Long press the power button for 3 seconds to turn on the K50 wireless portable speaker.
2.Ensure that your Bluetooth device is powered on and its Bluetooth function is enabled.
3.Select "K50" from the Bluetooth settings page on your Bluetooth device.
4.To disconnect the Bluetooth connection, long press the EQ button for 3 seconds.
5.If the K50 was previously paired with a Bluetooth device, it will automatically connect to that device the next time it is powered on.

Connecting via AUX

1.Use a 3.5mm audio cable to connect the speaker to your smartphone or computer.

2.Press the EQ button once during music playback to stop the playback on the K50.

Using the TWS Function

With the wireless stereo pairing function, you can pair two K50 speakers to enjoy stereo sound anywhere.

1.Prepare two K50 speakers. Long press the power button on both speakers until you hear the voice prompt "Bluetooth mode".

2.Ensure that both speakers are not connected to any Bluetooth device. If the speakers automatically connect to a previously paired Bluetooth device, the TWS connection may fail. In this case, disconnect the Bluetooth connection on the previously paired device.

3.Double-click the power button on either K50 speaker to hear the pairing voice prompt. Pairing takes about 2-4 seconds. When you hear the voice prompt, it indicates that the TWS connection is successful.

4.Turn on the Bluetooth function on your Bluetooth device. Select "K50" from the Bluetooth settings screen on your Bluetooth device to connect.

5.After the initial TWS connection is completed, the two K50 speakers will automatically connect via TWS the next time they are powered on.

6.If the automatic TWS connection does not occur after the initial pairing, ensure there are no obstacles between the two K50 speakers and that they are within 3 meters of each other. If the TWS connection still fails, repeat steps 1-4.

7.To disconnect the TWS connection, double-click the power button on either K50 speaker for 2 seconds.

IPX7 Waterproof

The product body is designed with an IPX7 waterproof rating, allowing it to be submerged in up to 1 meter of water for up to 30 minutes. This makes it easy to enjoy your favorite music in the kitchen, bathroom, or even at the beach.

Precautions

1.Do not charge the device in areas where it may come into contact with water. The included accessories are not waterproof or dustproof. To reduce the risk of fire or electric shock, do not expose the main unit to water or droplets while using the included USB Type-C cable.

2.If the surface becomes dirty, promptly clean it with fresh water (tap water) to remove the dirt. Leaving it dirty can cause discoloration or deterioration of the passive radiator parts and lead to speaker malfunction.

3.If the surface is wet, quickly wipe off the water with a soft, dry cloth. Then, let it dry in a well-ventilated area.

Charging Precautions

1.Charge the device in an environment with a temperature between 8°C and 39°C.

2.When using the speaker for the first time, charge it for at least 2 hours before turning it on.

3.Connect the USB Type-C cable to the DC IN 5V port on the speaker, and connect the other end to a commercially available USB AC adapter. Then, plug the USB AC adapter into a power outlet.

4.The charging time may be longer depending on usage conditions, so it is recommended to turn off the speaker while charging.

5.If you do not use the speaker for an extended period, charge it once every three months to prevent battery degradation.

Usage Precautions

1.Do not place the speaker in the following locations: areas exposed to direct sunlight, under lighting fixtures, near heating devices or saunas, or in high-temperature areas such as a closed car (especially in summer).

2.Place the speaker on a flat surface. Placing it on a tilted surface may cause it to tip over or fall due to vibrations, leading to injury, malfunction, or performance degradation.

3.The speaker is precisely adjusted. Do not disassemble or modify it.

4.Do not use the product if the cable is cracked or has any physical damage.

5.The speaker may become warm during charging, but this is not a malfunction.

6.The battery life of the built-in battery varies depending on temperature and usage conditions. For example, using the speaker at high volume will shorten the battery life.

7.Noise or sound interruptions may occur depending on the Bluetooth device connected to the speaker, the communication environment, and the surrounding conditions.

Troubleshooting

Q: Unable to pair (register) Bluetooth device

A:1.If the speaker automatically connects to a previously paired Bluetooth device, the Bluetooth connection may fail. In this case, disconnect the Bluetooth connection of the previously paired device.

2.If the speaker does not appear on the Bluetooth device you want to pair with, turn off the Bluetooth function on the Bluetooth device and then turn it back on to improve the situation.

Troubleshooting for Audio Issues

If there is no sound, the sound is low, distorted, noisy, or interrupted:

1.Ensure that both the connected device and the speaker are powered on.

2.Check the volume levels on both the connected device and the speaker.

3.Confirm that the speaker and the Bluetooth device are connected via Bluetooth.

4.Re-pair (register) the Bluetooth device with the speaker.

5.Keep the speaker away from microwaves or wireless LAN devices.

6.Move the Bluetooth device closer to the speaker. If there are obstacles between the speaker and the Bluetooth device, remove them.

7.When connecting the speaker to devices with built-in radios or tuners via Bluetooth, noise may interfere with the radio sound. The speaker cannot be used with these devices through a Bluetooth connection.